



## Parts Included:



Arm Pad

## Tools Required:



T-20 Torx Driver

## Steps:





1. Using philips T20 torx bit remove the front arm pad bolt.



2. Lift up the arm pad and slide it off.

---

## Re-Assembly Steps:

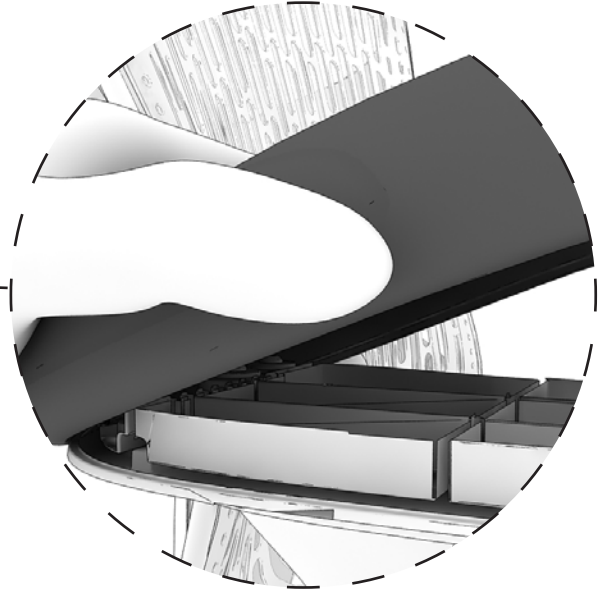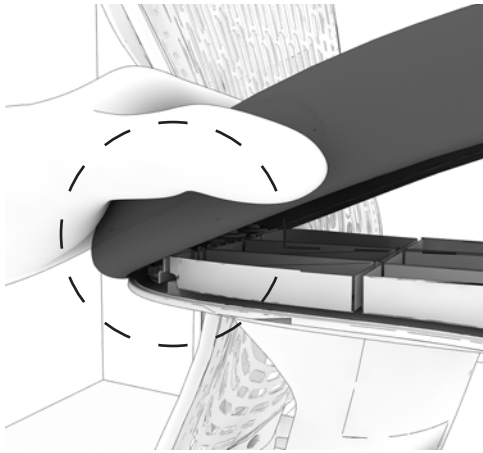

3. Hook the slot on the arm pad to the tab on the arm plate and rotate the arm pad down.



4. Reinstall the bolt. Torque to 15 in/lbs.